

Download Suunto Vyper Air Manual

5.6.3. Transmitting data After the pairing procedure, the Suunto Vyper Air will receive cylinder pressure data from the transmitter. The pressure is displayed in either bars or psi, depending on the The Suunto Vyper Air must be in "cd:--" mode to pair on the new code. This procedure can be used if, for example, your dive buddy has the same code and you need to change it. Page 43: Transmitting Data. 5.6.3. Transmitting data After the pairing procedure, the Suunto Vyper Air will receive cylinder pressure data from the transmitter. Ensure that the Suunto Vyper Air is turned on, and that the wireless integration is enabled in the Suunto Vyper Air settings (HP set ON, refer to Section 5.7.11. Setting the HP code). The Vyper Air should display "cd:--" in the lower left corner of the alternative display. Slowly open the cylinder valve fully and pressurize the system. Page 43 Suunto Vyper AIR was designed to help you get the most out of your diving. After reading this manual and becoming familiar with the functions of your dive computer, you'll be ready to take the plunge into a whole new world of diving. With integrated digital compass and gas switching, Suunto Vyper AIR simplifies your diving